


PRUNE ANY BROKEN BRANCHES FOUND IN THE CANOPY.

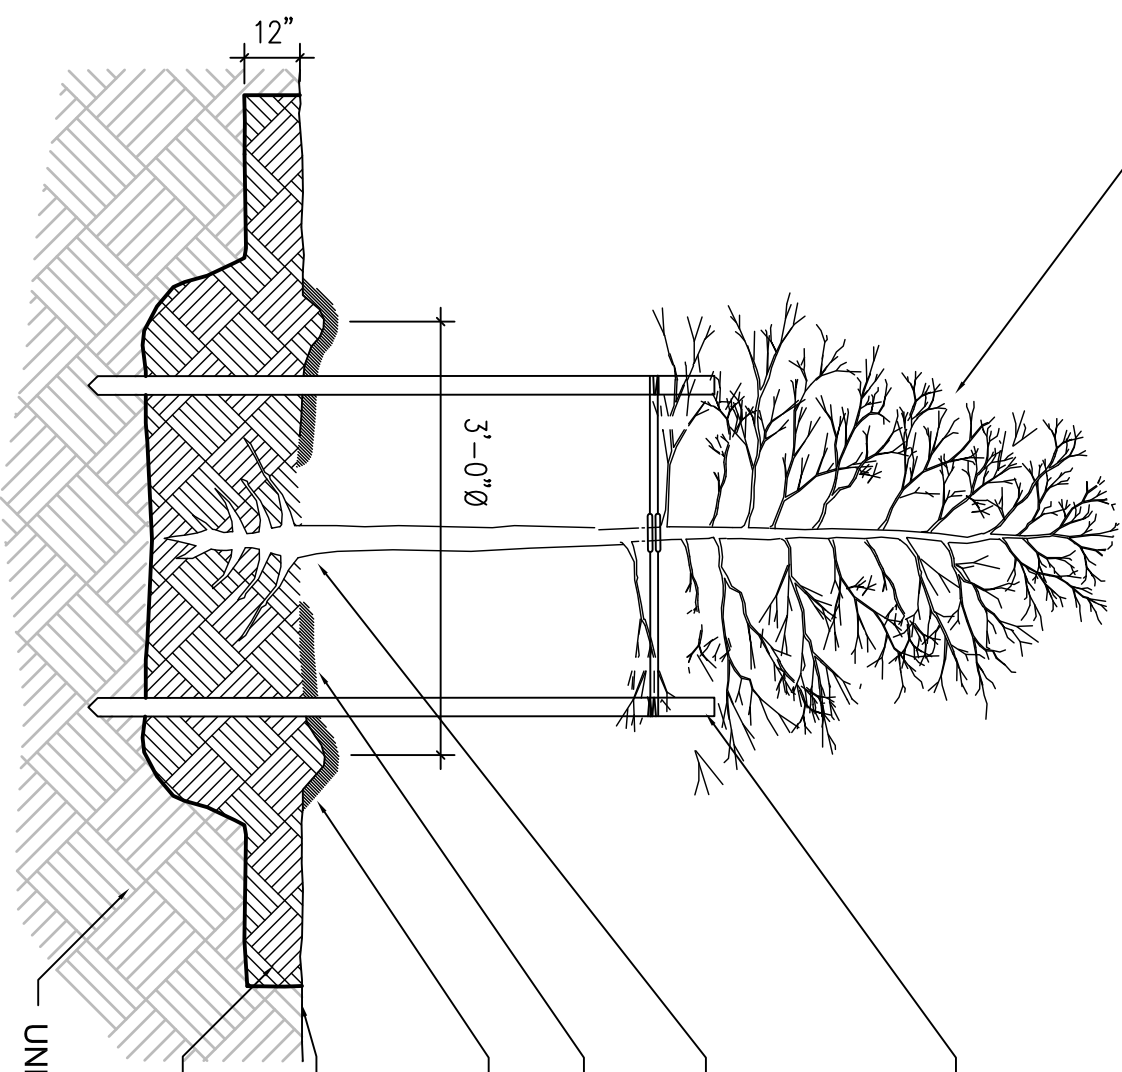

HARDWOOD STAKE DRIVE 18" TO 24" INTO GROUND WITH 3" WEBBING OR POLYETHYLENE STRIPS TWISTED LOOSELY ONE TIME AROUND TRUNK ALLOWING FOR SOME SWAYING AND AFFIXED TO STAKE. PLACE STAKES BETWEEN 18" AND 36" FROM TRUNK.

DO NOT COVER ROOT FLARE WITH SOIL OR MULCH. ROOT FLARE SHALL BE AT GRADE AND VISIBLE.

MULCH: 3" SETTLED DEPTH; KEEP 3 TO 6 INCHES AWAY FROM BASE OF TRUNK.

CREATE SLIGHTLY RAISED (1") RING OF SOIL & MULCH TO KEEP WATER IN HOLE AND AROUND ROOT BALL - ESPECIALLY IMPORTANT IF TOP OF ROOT BALL IS ABOVE GRADE LEVEL.

FINISH GRADE

BACKFILL PLANTING SOIL, AS SPECIFIED

UNDISTURBED SOIL

MIX

1 BARE ROOT PLANTING DETAIL